

# 3. Driving

This is it! You're now ready to drive the PiCar around.

**Remember:** Some roaming functionality is not perfect yet. We're working on getting it all up and running.


## Connecting...

1. Laptop - Make sure your laptop or client is on: "StemSpot"
2. Using the name of the car, you can connect to it in your browser, like:

http://PiCar<num>:8000 **Ex: <http://PiCar3:8000>**

You can always use the IP if the car name is not working. **Use an app like [fing](#).**

You should be met with this screen. This allows you to control the car, and make necessary calibrations in the settings tab.

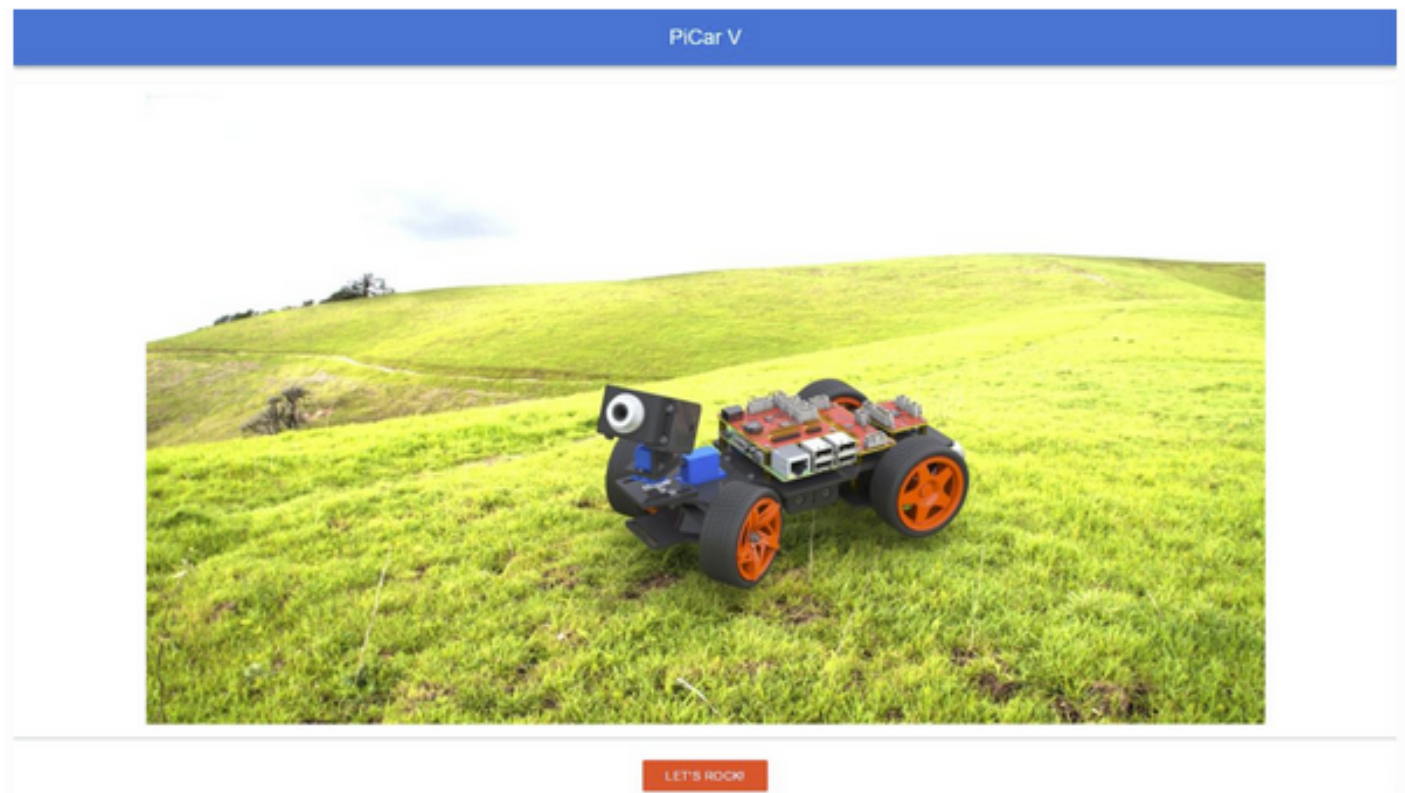



SPEED:

1

2

3

4

5

FULLSCREEN



# Happy Driving!!!

Revision #4

Created 23 February 2024 03:24:20 by Liev Dorfman

Updated 11 April 2024 17:34:30 by Liev Dorfman